

# 80PK-24

## SureGrip™ Air Temperature Probe

### Instruction Sheet

#### Warning

To avoid electrical shock, do not use this probe when voltages exceeding 24 V ac rms or 60 V dc are present. The probe tip is electronically connected to the output terminals.

#### **Introduction**

The 80PK-24 SureGrip™ Air Temperature Probe is designed for measuring the temperature of air or gases. The measuring bead of the probe is protected by a perforated 304 Stainless Steel baffle to prevent accidental damage. The sheath material is 300 Stainless Steel. The 38-inch (1 meter) cable is terminated with a Type K miniature thermocouple connector with 0.792-mm (.312-in) pin spacing. The 80PK-24 can be used with any temperature-measuring instrument that is designed to accept Type K thermocouples and has a miniature connector input.

#### **Specifications**

##### **Type**

K Standard Grade Ni-Cr vs Ni-Al (Chromel vs Alumel)

##### **Measurement Range**

-40 °C to 816 °C (-40 °F to 1500 °F)

##### **Accuracy**

(With respect to ANSI MC96.1-1982-Standard Limits of Error):

##### *Note*

*All error calculations should be done in °C, then scaled to °F.*

Range	Accuracy (% of reading)
-40 °C to 0 °C (-40 °F to 32 °F)	±2.2 °C
0 °C to 275 °C (32 °F to 527 °F)	±1.1 °C
275 °C to 816 °C (527 °F to 1500 °F)	±0.4 %

November 2004

© 2004 Fluke Corporation. All rights reserved.

All product names are trademarks of their respective companies

## **Output**

@ 25 °C (77 °F) =1.00 mV (reference junction @ 0 °C)

## **Seebeck Coefficient**

@ 25°C (77°F) =40.50  $\mu\text{V} / ^\circ\text{C}$

## **Measurement Time (Time Constant)**

3.0 seconds in 100 °C air moving at 3.33 meters/second (10.9 feet/ second) at sea level pressure (5 time constants = 1 complete step change, i.e., 15 seconds).

Maximum Voltage: 24 V ac rms or 60 V dc

Maximum Temperature of Tip: 816 °C (1500 °F)

## **Baffle**

Material: 304 Stainless Steel Dimensions

Diameter: 3.81 mm (0.150 in)

Length: 3.3 cm (1.3 in)

## **Sheath**

Material: 304 Stainless Steel Dimensions

Diameter: 3.175 mm (0.125 in)

Length: 215.9 mm (8.5 in) from handle body to end of baffle

## **Grounding**

Junction welded to sheath.

## **Cable**

Length: 38 inches (1 meter)

Insulation

Material: PVC

Maximum Temperature: 105 °C (220 °F)

Jacket Color: Gray

## **Conductors**

Type: K

Size: AWG #24 stranded (7 strands of #32)

## **Handle**

Material: Hytrel

Maximum Temperature: 125 °C (257 °F)

## **Connector**

Type: Mini-thermocouple connector with .792 mm (0.312 in) pin spacing

Material: Yellow Hytrel

Maximum Temperature: 125 °C (257 °F)

## **Overall Length**

31.9 cm (12.55 in) from baffle tip to end of cable strain relief.

## **Protection**

Class 3. Relates solely to insulation and grounding properties defined in IEC 348.

## **Measurement Considerations**

### **Instrument Compatibility**

The 80PK-24 is compatible with any temperature-measuring instrument that accepts Type K thermocouples, has a miniature thermocouple connector, and has cold reference junction compensation. Accuracy of the temperature-measuring instrument must be considered along with the 80PK-24 accuracy specification to determine the overall accuracy of the combination.

### **Temperature Limitations**

The baffle tip of the 80PK-24 has a continuous temperature rating of 816 °C (1500 °F). However, the opposite end of the sheath nearest the handle should not be subjected to temperatures greater than 125 °C (257 °F). This is the maximum temperature limitation of the handle.

### **Media Limitations**

The stainless steel baffle and sheath should not be exposed to halides or sulfides. Even though the sheath to junction transition is sealed, it is not recommended to immerse the probe in liquid or saturated vapor. The 80PK-24 should not be used in reducing atmospheres or in a vacuum.

## **Operation**

Use the 80PK-24 as follows:

1. Use the miniature (0.312-inch spacing) thermocouple connector to connect the 80PK-24 to a compatible Type K temperature-measuring instrument.
2. Turn on the measuring instrument, and select the appropriate range and scale.
3. Check the read out on the measuring instrument. With no heat or cold source applied to the tip of the probe, the measuring instrument should display the ambient (room) temperature. If the instrument does not read out properly, refer to “Troubleshooting”.

### **Minimizing Thermal Shunting**

The 80PK-24 Air Probe should be inserted at least 6.35 cm (2.5 in) into the environment to be measured to minimize the shunting effect of the sheath.

## Troubleshooting

With no heat or cold applied to the probe, the measuring instrument should display the ambient temperature. If the measuring instrument does not read out properly, try the following:

1. Verify that the temperature-measuring instrument is designed to be used with Type K thermocouples. The temperature-measuring instrument should have a yellow input connector and / or be marked with a "K".
2. Check for an open circuit indicator on the measuring instrument. Some temperature measuring instruments have a built-in circuit to indicate if the connected probe is open. (All Fluke Temperature-measuring instruments have this feature.) Refer to the owners manual accompanying the measuring instrument to see if this feature is available.

Short the two input pins of the measuring instrument with a piece of wire. If the instrument is functioning, it should indicate the ambient temperature.

3. If you suspect a broken connection, use an ordinary ohmmeter to read the continuity of the probe from pin to pin. The ohmmeter should read 20 ohms or less if there is continuity.

## Scale Conversions

Use the following equation to convert °C to °F:

$$(^{\circ}\text{C} \times 1.8) + 32 = ^{\circ}\text{F}$$

Use the following equation to convert °F to °C:

$$(^{\circ}\text{F} - 32) \times 0.5556 = ^{\circ}\text{C}$$

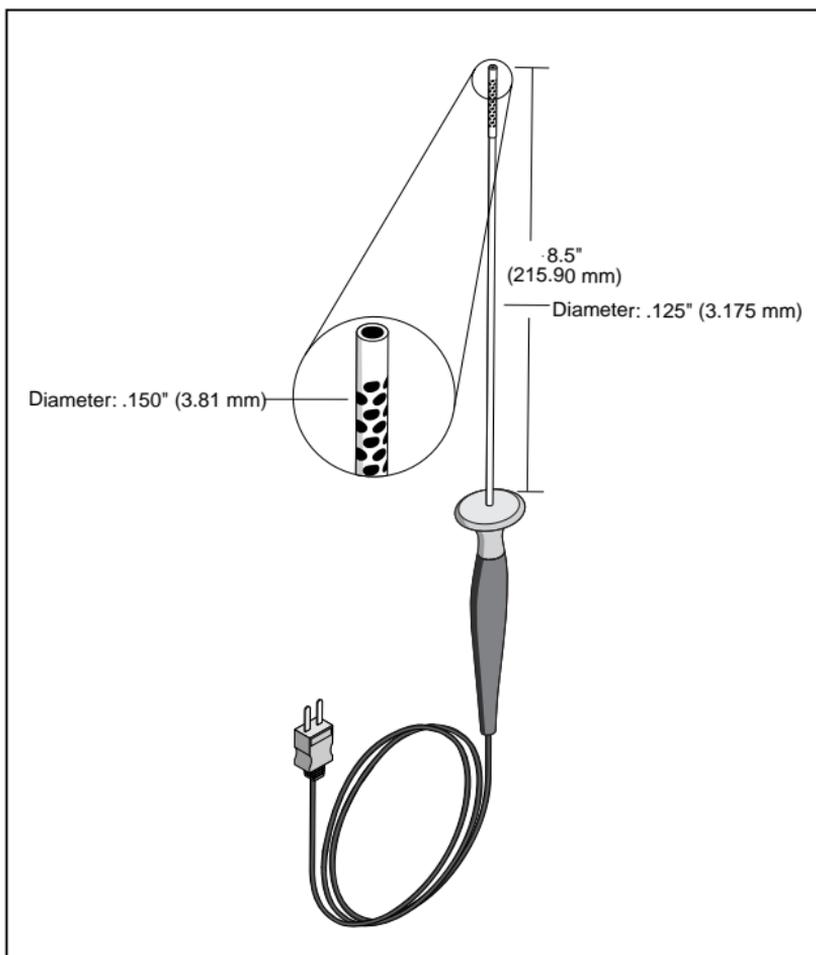


Figure 2. 80PK-24

## **Contacting Fluke**

For application or operation assistance, or information on Fluke products, call:

USA: 1-888-44-FLUKE (1-888-443-5853)

Canada: 1-800-36-FLUKE (1-800-363-5853)

Europe: +31 402-675-200

Japan: +81-3-3434-0181

Singapore: +65-738-5655

Anywhere in the world: +1-425-446-5500

For USA Service: 1-888-99-FLUKE  
(1-888-993-5853)

Or, visit Fluke's Web site at [www.fluke.com](http://www.fluke.com).

To register your product, visit [register.fluke.com](http://register.fluke.com)

### ONE YEAR LIMITED WARRANTY

This Fluke product will be free from defects in material and workmanship for one year from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.

Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands